

**MIDIPLUS**

# **EK490 plus Owner's Manual**



# CONTENTS

Preface.....	1
What's in the Box? .....	1
EK490 Plus Keyboard Overview : .....	1
Chapter1. Quick Start.....	2
1.1. EK490 plus Overview.....	2
1.1.1. Front Panel.....	2
1.1.2. Rear Panel .....	3
1.2. Basic Functions.....	3
1.2.1. LCD Display screen .....	3
1.2.2. TEMPO SELECT .....	3
1.2.3. DEMO SELECT.....	3
1.2.4. VOLUME SELECT.....	3
1.2.5. VOLUME sliders.....	4
1.2.6. OCTAVE up/down .....	4
1.2.7. PITCH wheel .....	4
1.2.8. MODULATION wheel.....	4
1.2.9. VOICE SELECT .....	4
Chapter2. Basic Operations.....	5
2.1. Playing Operation.....	5
2.1.1. VELOCITY .....	5
2.1.2. TRANSPOSE .....	5
2.1.3. LAYER.....	5
2.1.4. DOUBLE KEYBOARD.....	5
2.1.5. SUSTAIN .....	5
2.1.6. REVERB .....	5
2.1.7. CHORUS.....	5
2.1.8. NORMAL MODE .....	6
2.1.9. DRUMMER .....	6
2.1.10. RHYTHM SELECT.....	6
2.2. AUTO ACCOMPANIMENT .....	5
2.2.1. SYNC/VARIATION.....	6
2.2.2. START/STOP .....	7
2.2.3. INTRO .....	7
2.2.4. ENDING.....	6
2.2.5. FILL A/B .....	7
2.2.6. ONE FINGER .....	7
2.2.7. MULTI FINGER .....	8
2.3. Saving to the Registration Memory .....	8

2.3.1.	PRESET.....	8
2.3.2.	RECORD .....	8
2.3.3.	PLAY.....	8
Chapter3.	Auxiliary jack .....	9
3.1.	Basic jack .....	9
3.1.1.	PHONE jack.....	9
3.1.2.	AUX OUT jack .....	9
3.1.3.	SUSTAIN SWITCH jack.....	9
3.1.4.	DC 9V jack.....	9
3.2.	MIDI jack .....	9
3.2.1.	MIDI OUT jacks.....	9
3.2.2.	MIDI IN jacks .....	9
3.2.3.	USB port .....	9

## Appendix :

Appendix 1:	Specification.....	9
Appendix 2:	Voice List .....	11
Appendix 3:	Demo List .....	12
Appendix 4:	Rhythm List .....	12

# Preface

Thank you for purchasing the MIDIPLUS EK490 Plus, an intelligent and versatile keyboard. We focused on improving the sound quality and weighted keys to make the playing experience better. The high-quality sounds of the EK490 Plus are compatible with the general MIDI format and other formats. It is designed to provide everything that the serious artist or amateur musician needs on stage or at home. When used with a computer with the appropriate music software, it becomes a more powerful musical instrument and workstation.

## What's in the Box?

- **MIDIPLUS EK490 Plus** USB MIDI keyboard with styles
- Owner's manual
- 9V DC adaptor

## EK490 Plus Overview :


The EK490 Plus includes the following features :

- 49-note semi-weighted piano type keyboard.
- Pitch bend wheel
- Modulation wheel
- Function buttons
- Sustain pedal interface (sustain pedal does not include).
- LCD display screen
- Multiple options for power supply: External 9V DC power adaptor, USB power or 6 C type batteries.


# Chapter1. Quick Start

## 1.1. EK490 Plus Overview

### 1.1.1. Front Panel

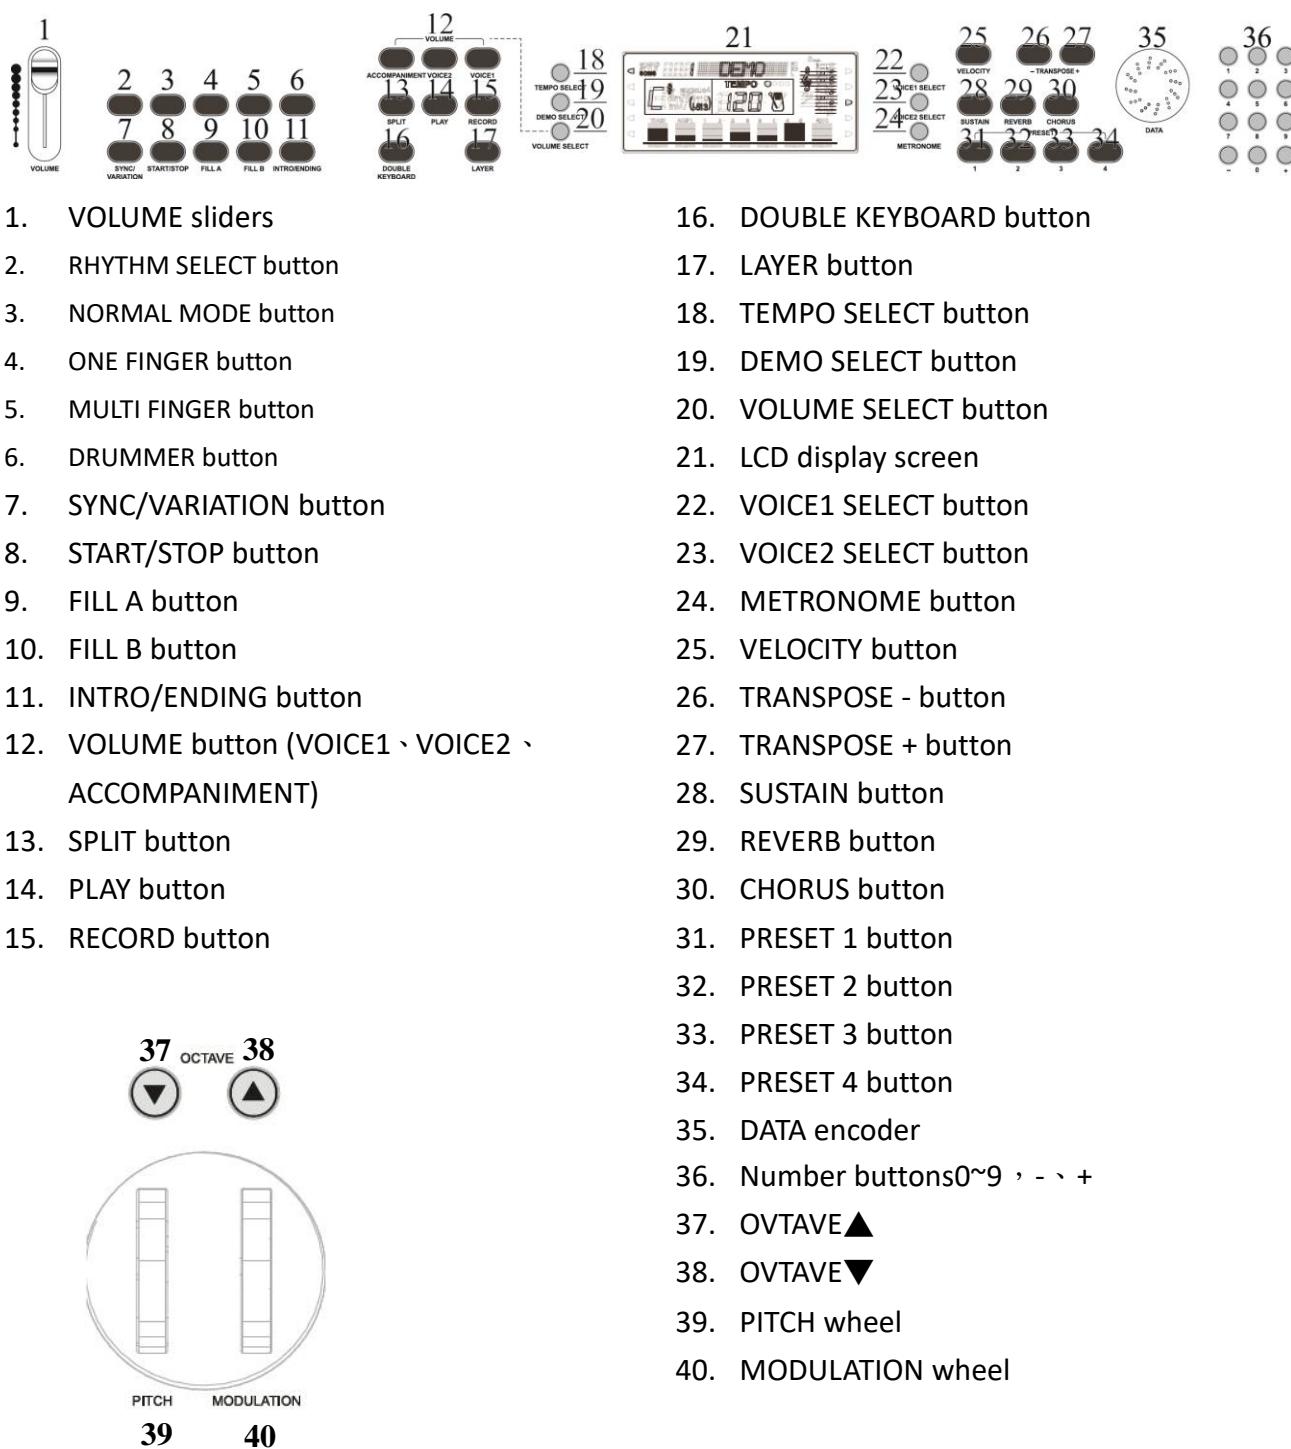


### 1.1.2. Rear Panel

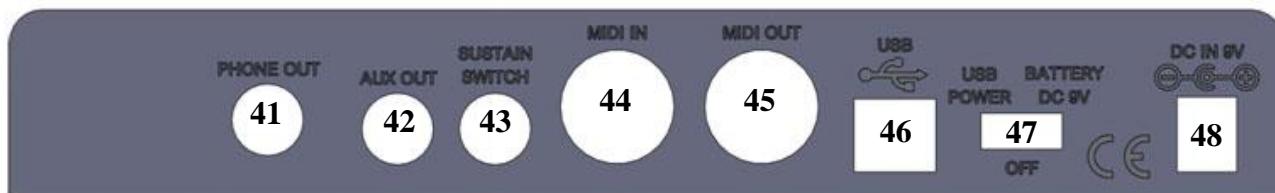

- |                         |                                                |
|-------------------------|------------------------------------------------|
| 41. PHONE jack          | 46. USB jack                                   |
| 42. AUX OUT jack        | 47. Power switch (USB POWER /BATTERY or DC 9V) |
| 43. SUSTAIN SWITCH jack | 48. DC IN 9V jack                              |
| 44. MIDI IN jack        |                                                |
| 45. MIDI OUT jack       |                                                |

## 1.2. Basic Functions

### 1.2.1. LCD Display screen

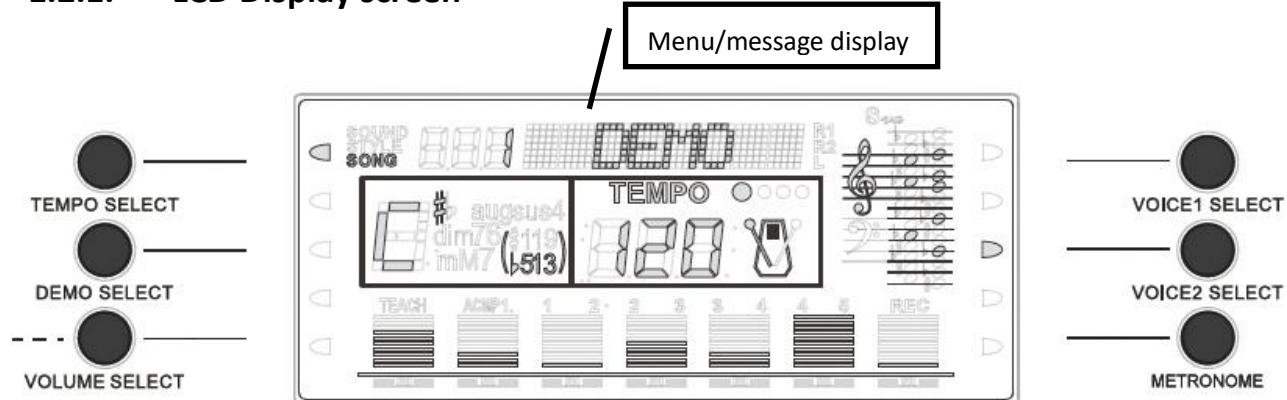

### 1.2.2. TEMPO SELECT

Select the tempo at which the rhythm accompaniment & DEMO is played.

- Press the 【TEMPO SELECT】 button.
- To select tempo:
  - Option 1: Use the 【DATA】 selection wheel.
  - Option 2: Use the 【+/-】 buttons.
  - Option 3: Use the numerical keypad. The tempo will change within 3 seconds.
- Press the 【+】 and 【-】 buttons simultaneously to reset the tempo to the default.

### 1.2.3. DEMO SELECT

Select a demo track. The EK490 Plus contains 20 demo tracks that highlight different styles of music.

- Press the 【DEMO SELECT】button.
- To select demo track:
- Option 1: Use the 【DATA】selection wheel.
- Option 2: Use the 【+/-】buttons.
- Option 3: Use the numerical keypad. The demo track will change within 3 seconds.

#### **1.2.4. VOLUME SELECT**

Individually control the volume of VOICE1, VOICE2, and ACCOMPANIMENT.

- Press the 【VOLUME SELECT】button.
- Press the 【VOICE1】button, 【VOICE2】button, or 【ACCOMPANIMENT】button. Button will light up when pressed.
- To select volume:
- Option 1: Use the 【DATA】selection wheel to select volume.
- Option 2: Use the 【+/-】buttons.
- Option 3: Use the numerical keypad. The demo track will change within 3 seconds.

#### **1.2.5. VOLUME slider**

Adjust the overall volume.

#### **1.2.6. OCTAVE up/down**

Adjust the relative pitch one octave higher or lower.

Press both buttons simultaneously to reset to the default octave.

#### **1.2.7. PITCH wheel**

Raise or lower the pitch continuously up to a whole step from the original pitch. The range of pitch values depends on the sound generator (sound card or module) being used.

#### **1.2.8. MODULATION wheel**

Change the intensity of modulation (vibrato).

#### **1.2.9. VOICE SELECT**

Select the voice for Voice1 or Voice2.

- Press the 【VOICE1 SELECT】or 【VOICE2 SELECT】button.
- To select voice:
- Option 1: Use the 【DATA】selection wheel to select volume.
- Option 2: Use the 【+/-】buttons.
- Option 3: Use the numerical keypad. The demo track will change within 3 seconds.

# **Chapter2. Basic Operations**

## **2.1. Playing Operation**

### **2.1.1. VELOCITY**

Toggle whether keyboard reads velocity (the initial force used to press the key). Velocity is read by default.

### **2.1.2. TRANSPOSE**

Change the relative pitch of the keyboard.

- Press the TRANSPOSE **【+】** or **【-】** button. Each button press will transpose the keyboard by a semitone from -5 to +6.
- Press the TRANSPOSE **【+】** and **【-】** buttons simultaneously to reset the transpose value to the default ("C"). Button lights will turn off on reset.

### **2.1.3. LAYER**

Layer Voice1 and Voice2 on top of each other, chosen using **【VOICE1 SELECT】** and **【VOICE2 SELECT】**.

#### **2.1.1. DOUBLE KEYBOARD**

Split the keyboard into two voices, Voice2 (C1 – F#2) and Voice1 (G2 – C5). Raises Voice2 by two octaves. Modulation will only apply to Voice1.

#### **2.1.2. SUSTAIN**

Toggle sustain. Sustain is off by default.

#### **2.1.3. REVERB**

Toggle reverb. Reverb is off by default.

#### **2.1.4. DOUBLE KEYBOARD**

Split the keyboard into two voices, Voice2 (C1 – F#2) and Voice1 (G2 – C5). Raises Voice2 by two octaves. Modulation will only apply to Voice1.

## **2.1.5. SUSTAIN**

Toggle sustain. Sustain is off by default.

## **2.1.6. REVERB**

Toggle reverb. Reverb is off by default.

## **2.1.7. CHORUS**

Toggle chorus. Chorus is off by default.

## **2.1.8. NORMAL MODE**

When **【NORMAL MODE】** is pressed, the keyboard utilizes the selected voice (VOICE1 and/or VOICE2) to play standard pitches.

## **2.1.9. DRUMMER**

When **【DRUMMER】** is pressed, notes on the keyboard correlate with unpitched percussion.

## **2.1.10. RHYTHM SELECT**

Select the rhythmic feel.

- Press the **【RHYTHM SELECT】** button.
- To select rhythm:
  - Option 1: Use the **【DATA】** selection wheel to select volume.
  - Option 2: Use the **【+/-】** buttons.
- Press **【START/STOP】** button

## **2.2. AUTO ACCOMPANIMENT**

The auto accompaniment feature puts a full backing band at your fingertips. To use it, all you have to do is play the chords with your left hand (C1 – F#2) and the selected accompaniment style matching your music will automatically play along. With auto accompaniment, even a solo performer can enjoy playing with the backing of an entire band or orchestra.

### **2.2.1. SYNC/VARIATION**

Control the harmony of auto accompaniment (sync) and toggle variations on the basic harmonies (variation).

- Sync

- Press the 【ONE FINGER】 or 【MULTI FINGER】 button. See sections 2.2.6 and 2.2.7 for details.
- Press the 【SYNC/VARIATION】 button.
- Play a note (if 【ONE FINGER】 selected) or chord (if 【MULTI FINGER】 selected) between C1 – F#2. Auto accompaniment will start, and the 【SYNC/VARIATION】 LED light will turn off.
- Variation
- While the accompaniment is playing, press the 【SYNC/VARIATION】 button. The 【SYNC/VARIATION】 LED light will turn on.

## **2.2.2. START/STOP**

Start or stop the selected rhythm track.

## **2.2.3. INTRO**

Begin with an introduction customized for the selected rhythm track. When the intro finishes, the accompaniment will shift to the main section. The length of the intro (in measures) differs depending on the selected rhythm.

- Press the 【INTRO/ENDING】 button.
- Press the 【START/STOP】 button.

## **2.2.4. ENDING**

Finish the song with an outro customized for the selected rhythm track. When the ending is finished, the accompaniment will stop automatically. The length of the ending (in measures) differs depending on the selected rhythm.

- Press the 【INTRO/ENDING】 button to begin the outro.

## **2.2.5. FILL A/B**

Add one of four fills customized for the selected accompaniment.

- To access fills 1 and 2, press the 【FILL A】 or the 【FILL B】 button while the 【SYNC/VARIATION】 LED is unlit
- To access fills 3 and 4, press the 【FILL A】 or the 【FILL B】 button while the 【SYNC/VARIATION】 LED is lit

## **2.2.6. ONE FINGER**

Control the beautifully orchestrated auto accompaniment using major, seventh, minor and minor-seventh chords by pressing a minimum number of keys between C1 and F#2. See section 2.2.1 (SYNC/VARIATION).

The following abbreviated chord fingerings are used:

- For a major chord, press the root key only.

- For a seventh chord, simultaneously press the root key and the nearest white key to its left.
- For a minor chord, simultaneously press the root key and the nearest black key to its left.
- For a minor-seventh chord, simultaneously press the root key, the nearest white key to its left, and the nearest black key to its left.

### **2.2.7. MULTI FINGER**

Take direct control over the harmonies of the auto accompaniment. See section 2.2.1 (SYNC/VARIATION).

When 【MULTI FINGER】 is selected, exactly three or four keys must be pressed to change the chord harmony.

## **2.3. Saving to the Registration Memory**

### **2.3.1. PRESET**

Save current settings to the registration memory for future use.

- To set a preset, hold the preset button 【1】 , 【2】 , 【3】 , or 【4】 button until there is a “ding” sound.

### **2.3.2. RECORD**

Record music to registration memory.

- To start/stop recording, press the 【RECORD】 button. Recording begins when the 【RECORD】 LED light flashes three times.

### **2.3.3. PLAY**

- Press the 【PLAY】 button to play back the recording. The 【PLAY】 LED light will not turn on.

## **Chapter3. Auxiliary jack**

### **3.1. Basic jacks**

#### **3.1.1. PHONE jack**

Connect external headphones (cord not provided). This jack is a 1/4 TRS stereo headphone output that plays the same signal as the main outputs.

#### **3.1.2. AUX OUT jack**

Connect to an external speaker with an AUX cord (not provided).

#### **3.1.3. SUSTAIN SWITCH jack**

Connect a sustain pedal (not provided).

#### **3.1.4. DC 9V jack**

Use only the provided external 9V DC adaptor or one with the same voltage rating as the power supply in your area to prevent damage to internal components.

## **3.2. MIDI jacks**

### **3.2.1. MIDI OUT jacks**

Sends MIDI messages to external devices.

### **3.2.2. MIDI IN jacks**

Receives external MIDI messages.

### **3.2.3. USB port**

Connect the keyboard with a computer (cord provided). The keyboard can use the computer for power and send MIDI messages directly to the sound card.

## Appendix 1 : Specification

<b>Model</b>	MIDIPLUS EK490 Plus
<b>Description</b>	PORTABLE E. PIANO
<b>Keyboard</b>	49 velocity sensitive piano-style key
<b>Maximum Polyphony</b>	64 notes
<b>Instruments</b>	128 GM list sound
<b>Quickly Sound</b>	x
<b>Rhythm Style</b>	64
<b>Demo Song</b>	20
<b>Sound Effect</b>	Velocity、Sustain、Reverb、Chorus、Split、Double keyboard、Double voice、Drum
<b>Auto Accompaniment</b>	Normal、One finger、Multi finger
<b>Other Control</b>	Transpose、Data Encoder、Numeric 0~9、+、-
<b>LCD</b>	Large LCD screen with blue back-light
<b>Volume Control</b>	Total、Accompaniment、Voice1、Voice2
<b>Record Control</b>	Record、Play
<b>Preset</b>	5
<b>Rhythm Control</b>	Sync/variation、Start/Stop、Fill-in A、Fill-in B、Intro/Ending
<b>Octave</b>	Up、Down
<b>Wheels</b>	Pitch、Modulation
<b>Tempo Control</b>	30-250
<b>MIDI</b>	16 multi-timbre received，GM Level 1 standard
<b>Socket</b>	Sustain pedal input、Aux out、MIDI IN/OUT、USB to computer、Stereo headphone
<b>Speaker Output</b>	2W+2W
<b>Power Adapter</b>	DC 9V / 2A
<b>Power Batteries</b>	6 x AA or equivalent batteries (not included)
<b>Dimensions</b>	About 83 x 25.5 x 8 cm
<b>Weight</b>	About 3.6 kg (without batteries)

## Appendix 2 : Voice List

1	Acoustic Grand Piano	33	Acoustic Bass	65	Soprano Sax	97	Fx 1 (rain)
2	Bright Acoustic Piano	34	Finger Bass	66	Alto Sax	98	Fx 2 (soundtrack)
3	Electric Grand Piano	35	Picked Bass	67	Tenor Sax	99	Fx 3 (crystal)
4	Honky-Tonk Piano	36	Fretless Bass	68	Baritone Sax	100	Fx 4 (atmosphere)
5	Electric Piano 1	37	Slap Bass1	69	Oboe	101	Fx 5 (brightness)
6	Electric Piano 2	38	Slap Bass 2	70	English Horn	102	Fx 6 (goblins)
7	Harpsichord	39	Synth Bass 1	71	Bassoon	103	Fx 7 (echoes)
8	Clavichord	40	Synth Bass 2	72	Clarinet	104	Fx 8 (sci-fi)
9	Celesta	41	Violin	73	Piccolo	105	Sitar
10	Glockenspiel	42	Viola	74	Flute	106	Banjo
11	Music Box	43	Cello	75	Recorder	107	Shamisen
12	Vibraphone	44	Contrabass	76	Pan Flute	108	Koto
13	Marimba	45	Tremolo Strings	77	Blown Bottle	109	Kalimba
14	Xylophone	46	Pizzicato Strings	78	Shakuhachi	110	Bagpipe
15	Tubular Bells	47	Orchestral Harp	79	Whistle	111	Fiddle
16	Dulcimer	48	Timpani	80	Ocarina	112	Shanai
17	Drawbar Organ	49	String Ensemble 1	81	Lead 1(square)	113	Tinkle Bell
18	Percussive Organ	50	String Ensemble 2	82	Lead 2(sawtooth)	114	Agogo
19	Rock Organ	51	Synth Strings1	83	Lead 3 (calliope)	115	Steel Drums
20	Church Organ	52	Synth Strings2	84	Lead 4 (chiff)	116	Woodblock
21	Reed Organ	53	Choir Aahs	85	Lead 5 (charang)	117	Taiko Drum
22	Accordion	54	Voice Oohs	86	Lead 6 (voice)	118	Melodic Tom
23	Harmonica	55	Synth Voice	87	Lead 7 (fifths)	119	Synth Drum
24	Tango Accordion	56	Orchestra Hit	88	Lead 8 (bass+lead)	120	Reverse Cymbal
25	Acoustic Guitar (nylon)	57	Trumpet	89	Pad 1 (new age)	121	Gt. Fret Noise
26	Acoustic Guitar (steel)	58	Trombone	90	Pad 2 (warm)	122	Breath Noise
27	Electric Guitar (jazz)	59	Tuba	91	Pad 3 (polysynth)	123	Seashore
28	Electric Guitar (clean)	60	Muted Trumpet	92	Pad 4 (choir)	124	Bird Tweet
29	Electric Guitar (muted)	61	French Horn	93	Pad 5 (bowed)	125	Telephone Ring
30	Overdriven Guitar	62	Brass Section	94	Pad 6 (metallic)	126	Helicopter
31	Distortion Guitar	63	Synth Brass 1	95	Pad 7 (halo)	127	Applause
32	Guitar harmonics	64	Synth Brass 2	96	Pad 8 (sweep)	128	Gunshot

### Appendix 3 : Demo List

1	Balloon Flower	11	The Flute
2	Papaya Song	12	Fishing Village
3	The Bluebells Of Scotland	13	My hometown
4	The Linden Tree	14	Sunny-side-up
5	Sword Brake	15	Home On The Range
6	In The Sweet Bye And Bye	16	Long Long Ago
7	Coconut	17	River
8	Whispering Pines	18	The harmonious blacksmith
9	Lovely Rose	19	Flow Gently Sweet Afton
10	Mongolian Pastoral Song	20	Women are fickle

### Appendix 4 : Rhythm List

1	ROCK1	17	BOOGIE	33	BOSSA1	49	SL WALTZ
2	ROCK2	18	ROCK'N1	34	BOSSA2	50	SW WALTZ
3	RAP	19	ROCK'N2	35	LATIN	51	WALTZ
4	HOUSE	20	TWIST	36	CHA CHA	52	MARCH
5	TECHNO	21	SL ROCK1	37	RUMBA	53	FOXTROT
6	DANCE	22	SL ROCK2	38	POPROCK	54	POLKA
7	FUNK1	23	DISCO1	39	BEGUINE	55	BAROQUE
8	FUNK2	24	DISCO2	40	TANGO	56	COUNTRY
9	8BEAT1	25	SWING1	41	SAMBA1	57	SOUL CHA
10	8BEAT2	26	SWING2	42	SAMBA2	58	SL TANGO
11	8BEAT3	27	BLUES	43	SALSA	59	RUM-WAL
12	8BEAT4	28	SL SWING	44	MAMBO1	60	T-RUMBA
13	16BEAT1	29	BIG BAND	45	MAMBO2	61	T-SOUL
14	16BEAT2	30	SHUFFLE	46	CALYPSO	62	T-DISCO
15	16BEAT3	31	DIXIE	47	REGGAE	63	ENKA
16	16BEAT4	32	CHARLEST	48	FUSION	64	SANDI